

INSTRUCTIONS

To reduce the risk of death, serious injury or property damage, please read and follow the safety information and provided instructions when assembling this product. Do not change or replace the components and accessories provided.

Electric Lifting Gaming Desk User's Manual

* Electric Lifting Gaming Desk Configuration:

Brand: XTREON
Product Name: ELECTRIC LIFTING GAMING DESK
Series No.: OBD-EW14-N
Tabletop Material: P2 MDF
Surface of Tabletop: PVC Blister With Carbon Fiber
Tabletop Thickness: 15mm
Tabletop Corner: Rounded
Tabletop Color: Black
Tabletop Dimensions: 1400x600x15mm
Frame Material: Metal tube with thickness 1.2mm
Product Dimensions: 1400*600*760mm
Package Dimensions: 1460*660*160mm
Product Net Weight: 21.4kg
Product Gross Weight: 24.8kg
Standard Accessories:
i. Plastic Water Cup Holder
ii. Metal Headset Holder

* Electric Control Part:

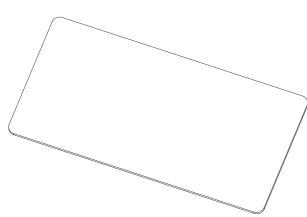


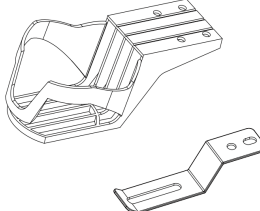
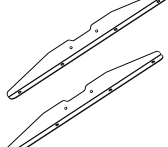
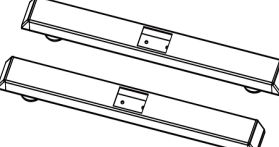

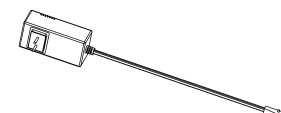
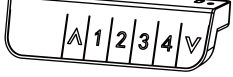

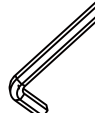
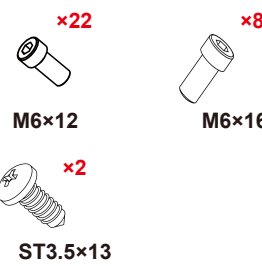
Input Voltage: 100-240V AC 50/60 Hz 2A
Duty cycle: 10% MAX 2 min on 18 min off
Load speed: 20mm/s
Lift range: 760mm ~1210mm
Bearing capacity: 80kg

Thank you for your purchase. Please read this manual carefully before using the product, and keep it for future reference.

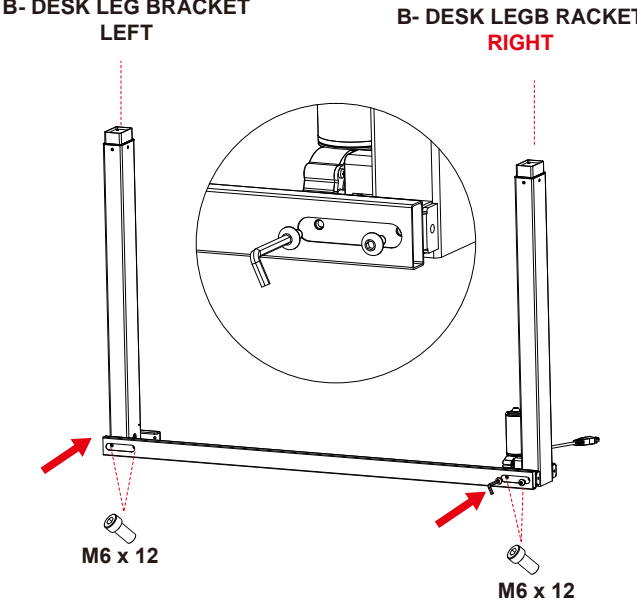
⚠ ATTENTION

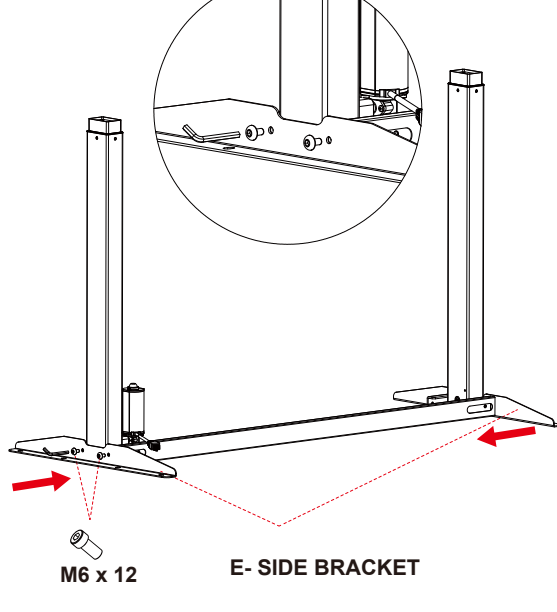
1. For indoor use only.
2. You are advised to wear protective gloves when assembling the desk.
3. Do not fully tighten bolts until you have completed assembly.
4. It is highly recommended that you assemble the desk on a carpeted floor surface so as to prevent scratches.
5. It is highly recommended that you adjust the desk to its lowest height before moving.
6. Before lifting the desk, check if surroundings are clear and make sure desk power cord is able to move freely as the desk moves up and down.
7. Do not spray cleaning solutions directly onto table system, clean only with a dry or slightly damp cloth.
8. Do not open electrical components.
9. Keep all electrical components away from water and high humidity.
10. Do not modify the plug provided with the product.
11. To disconnect, turn off all the power supply before removing the adapter from the outlet.
12. Check the desk parts on a monthly basis to ensure they are still functioning correctly.
13. Children are forbidden to play on the product because of unforeseen action when playing, so many dangerous consequences caused by this improper action will not be on manufacturers.
14. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.

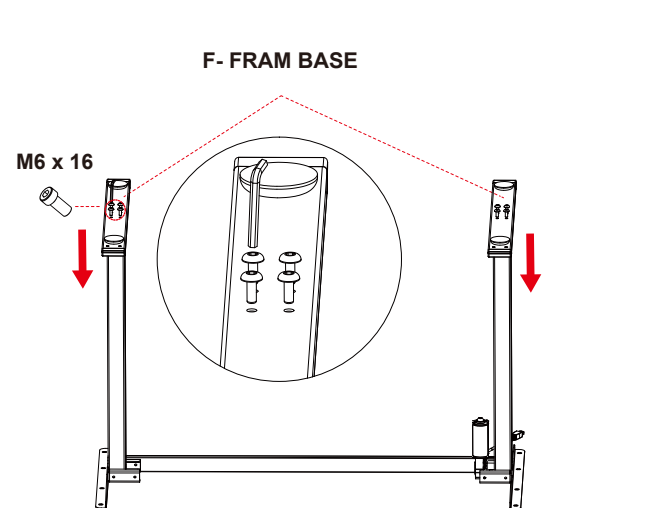
PART LIST

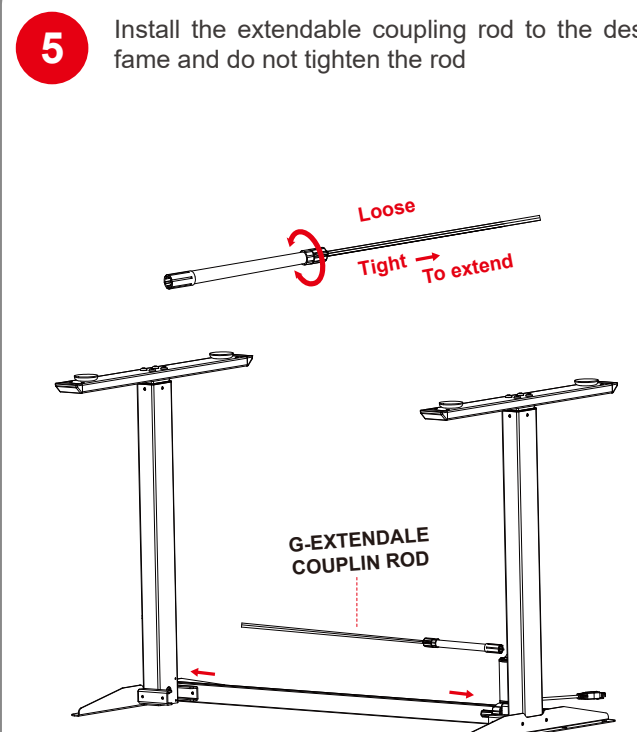
					
A- DESKTOP	B- DESK LEG BRACKET	C- EXTENDABLE BAR (SHORT)	D- CUP HOLDER and HOOK	E- SIDE BRACKET	F- FRAME BASE
					
G- EXTENDABLE COUPLING ROD	H- POWER CORD	I- CONTROLLER	J- SCREWDRIVER	K- ALLEN KEY	L- SCREWS

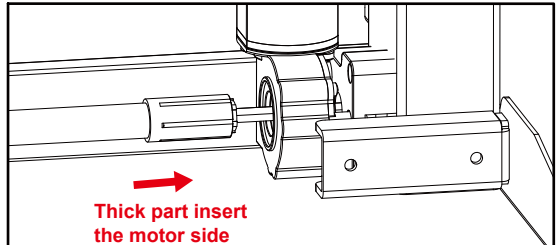
INSTALLATION

- 1** Install the frame supports (left & right) to cross bar with 4 pcs of M6 x 12mm screws. (5mm Allen Key)


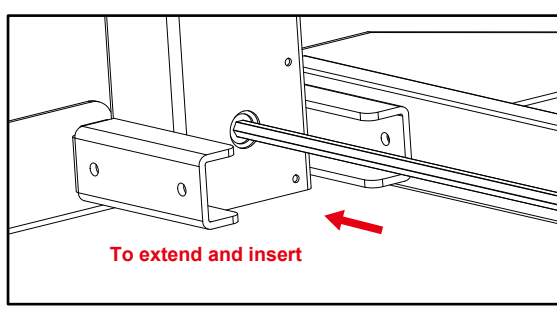
B- DESK LEG BRACKET LEFT B- DESK LEG BRACKET RIGHT
M6 x 12 M6 x 12
- 2** Install the side bracket to the frame with 4 pcs of M6 x 12mm screws. (5mm Allen Key)


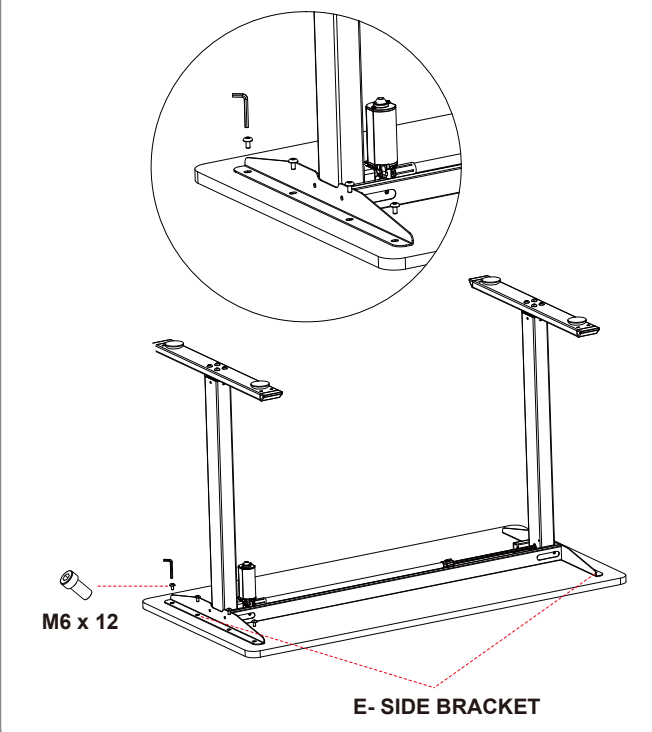
E- SIDE BRACKET
M6 x 12
- 4** Install the frame base to frame support with 8 pcs of M6 x 16mm screws. (5mm Allen Key)


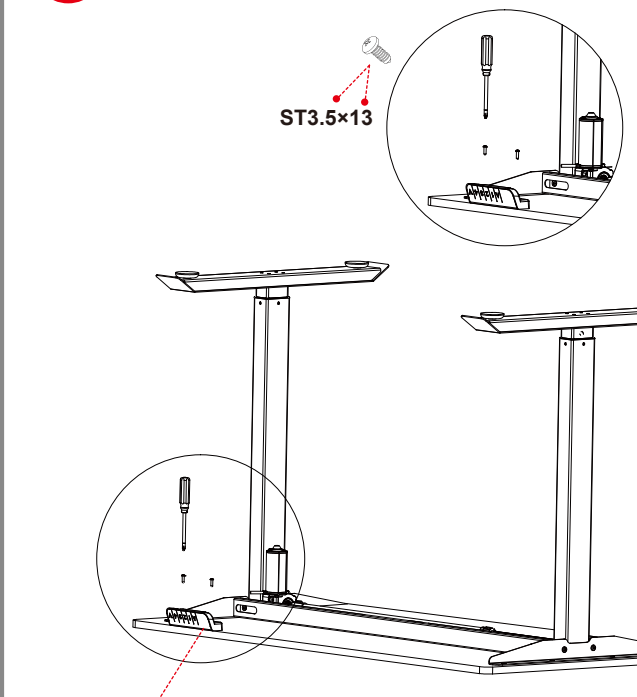
F- FRAM BASE
M6 x 16
- 5** Install the extendable coupling rod to the desk frame and do not tighten the rod


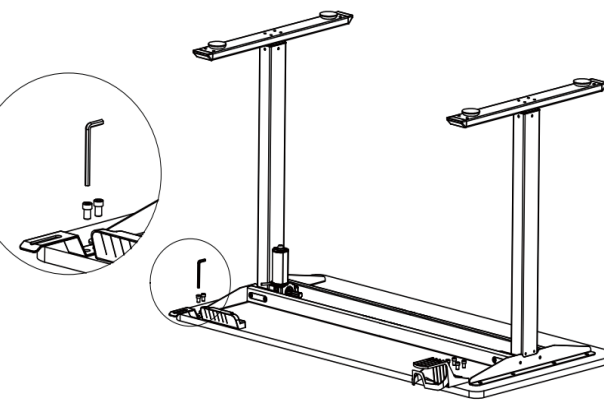
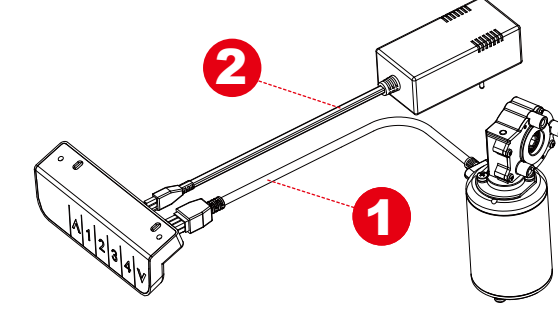
Loose Tight → To extend
G- EXTENDABLE COUPLIN ROD
- 6-1**


Thick part insert the motor side



To extend and insert
- 6-2** Install the desk top to desk frame with 8 pcs of M6x12mm screws.


E- SIDE BRACKET
M6 x 12
- 7** Install the extendable coupling rod to the desk frame and do not tighten the rod.


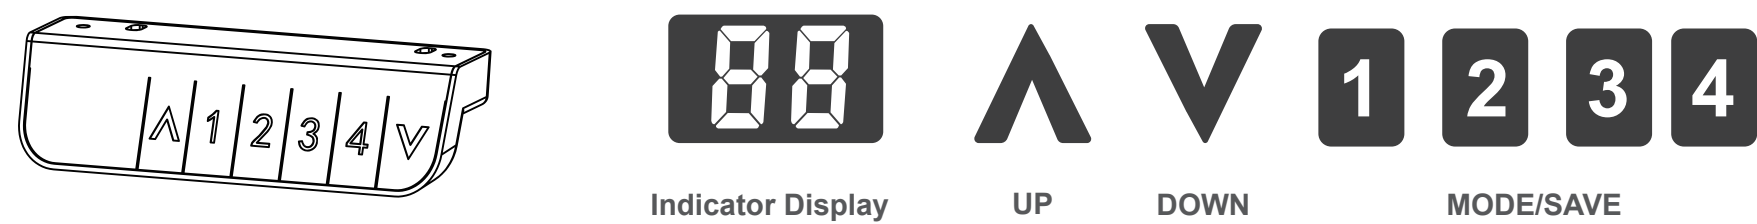
ST3.5x13
I- CONTROLLER
- 8** Install the cup holder and hook to the desk top with 6pcs M6x12 screws by 5mm allen key.

- 9**
 1. Connect the cable from motor to controller.
 2. Connect the cable from power cord to the controller as well.
 3. After connecting all the wiring, you may organize the cables using the cable clips.

2 1

INSTRUCTIONS

To reduce the risk of death, serious injury or property damage, please read and follow the safety information and provided instructions when assembling this product. Do not change or replace the components and accessories provided.

CONTROLLER INSTRUCTIONS



Reset Setting	Press "∨" and "∧" buttons together on the controller for 4 seconds, it will show "000", until you hear the beep release the buttons. The desk will automatically go down slowly. (It will have a rebound and rise about 5 mm/0.2in) until it shows "76" /"29.9"and when you hear the beep, the reset is succesful.
Height Adjustment	Up: Press "∧" button. Down: Press "∨"button.
Switch Display	Press 2 times "∨" when the desk is at the lowest position to switch cm to inch.
Memory Height	Press and hold any of memory buttons (1,2,3 or 4) until you hear a beep. Release the button, and this position height will be stored in memory. When the working height of memory needs to be used, press the memory position button and the desk will automatically adjust to the memory height. Note: This standing desk has 4 different height memories. The memory positions stored are still valid after power off. You can use the up and down buttons to adjust the standing desk to the height you need to work.

COMMON FAULT TREATMENT

CODE	Description	Method
E02	Motor overcurrent	Press "∨" or "∧" button again, if it still persist, please replace the motor or reduce the load
E03	Motor Hall failure	Press "∨" or "∧" button again, if it still persist, please check the connection or replace the motor
E04	The main power supply is abnormal	After power off, if it can not be eliminated, please replace the power supply
E05	Motor current is abnormal	After power off, if it can not be eliminated, please contact with your supplier or dealer
E06	Motor power device is damaged	After power off, if it can not be eliminated, please contact with your supplier or dealer
E09	Motor stalled	Press "∨" or "∧" button again, if it still persist, please replace the motor or reduce the load
E10	Anti-pinch triggering	
Hot	The motor is working too long time	1- Wait 18 mins, the code will disappear automatically 2- Unplug the power supply and power back on
RST	Illegal power off	Reset the program

Correct Disposal of this product

Waste Disposal



This marking indicates that this product should not be disposed with other household wastes according to your local rules.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.