
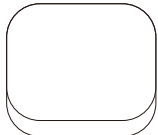


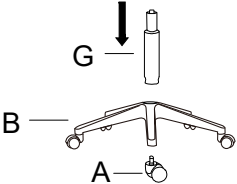
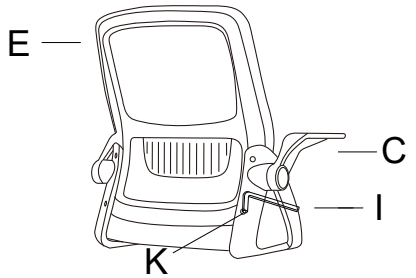



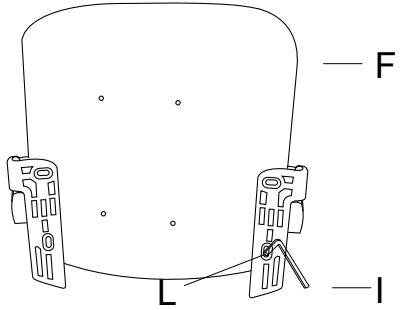
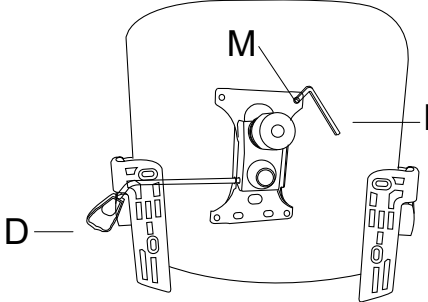

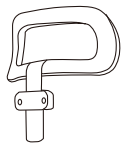
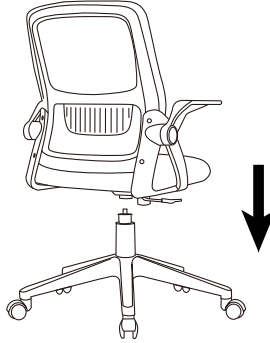
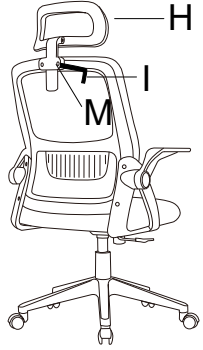




INSTRUCTION

Ax5 	Fx1 	Kx4  M6x25mm Lx4  M6x30mm	① Attach the casters to the base install the gas lift into the center hole of the base 	② Install armrest M6x25mm:4 
Bx1 	Gx1 	Mx6  M6x20mm	③ Install armrest to cushion M6x30mm:4 	④ Install mechanism under the cushion M6x20mm:4 
Cx1Lx1R 	Hx1 		⑤ Put the cushion on the gas lift 	⑥ Install headrest to backrest M6x20mm:2 
Dx1 	Ix1 			
Ex1 